



2/5

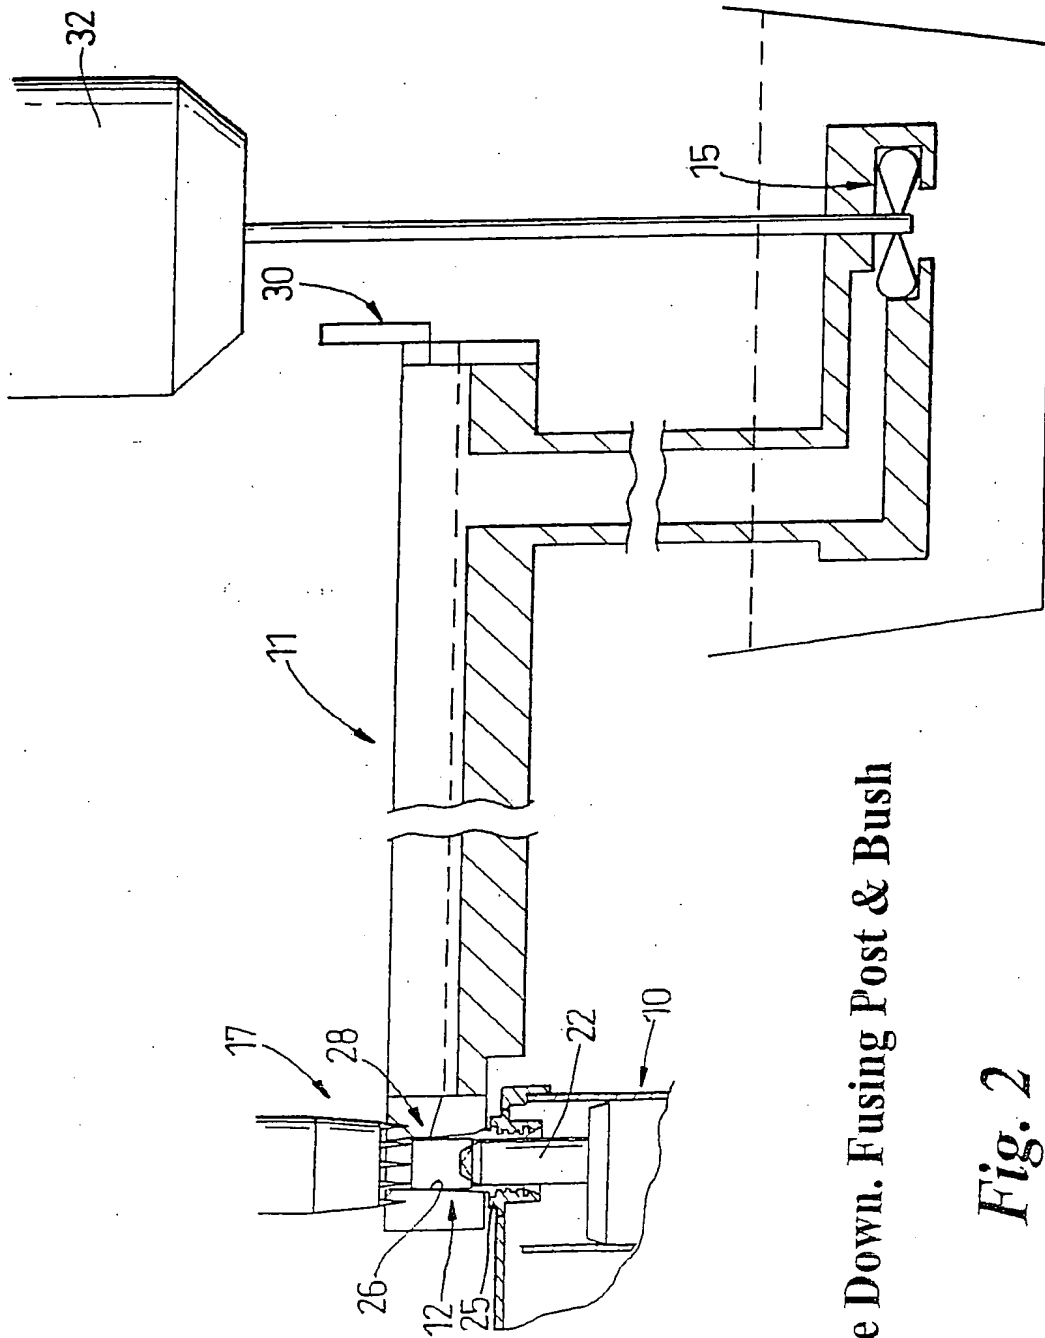


Probe Down. Fusing Post & Bush

Fig. 2

3/5

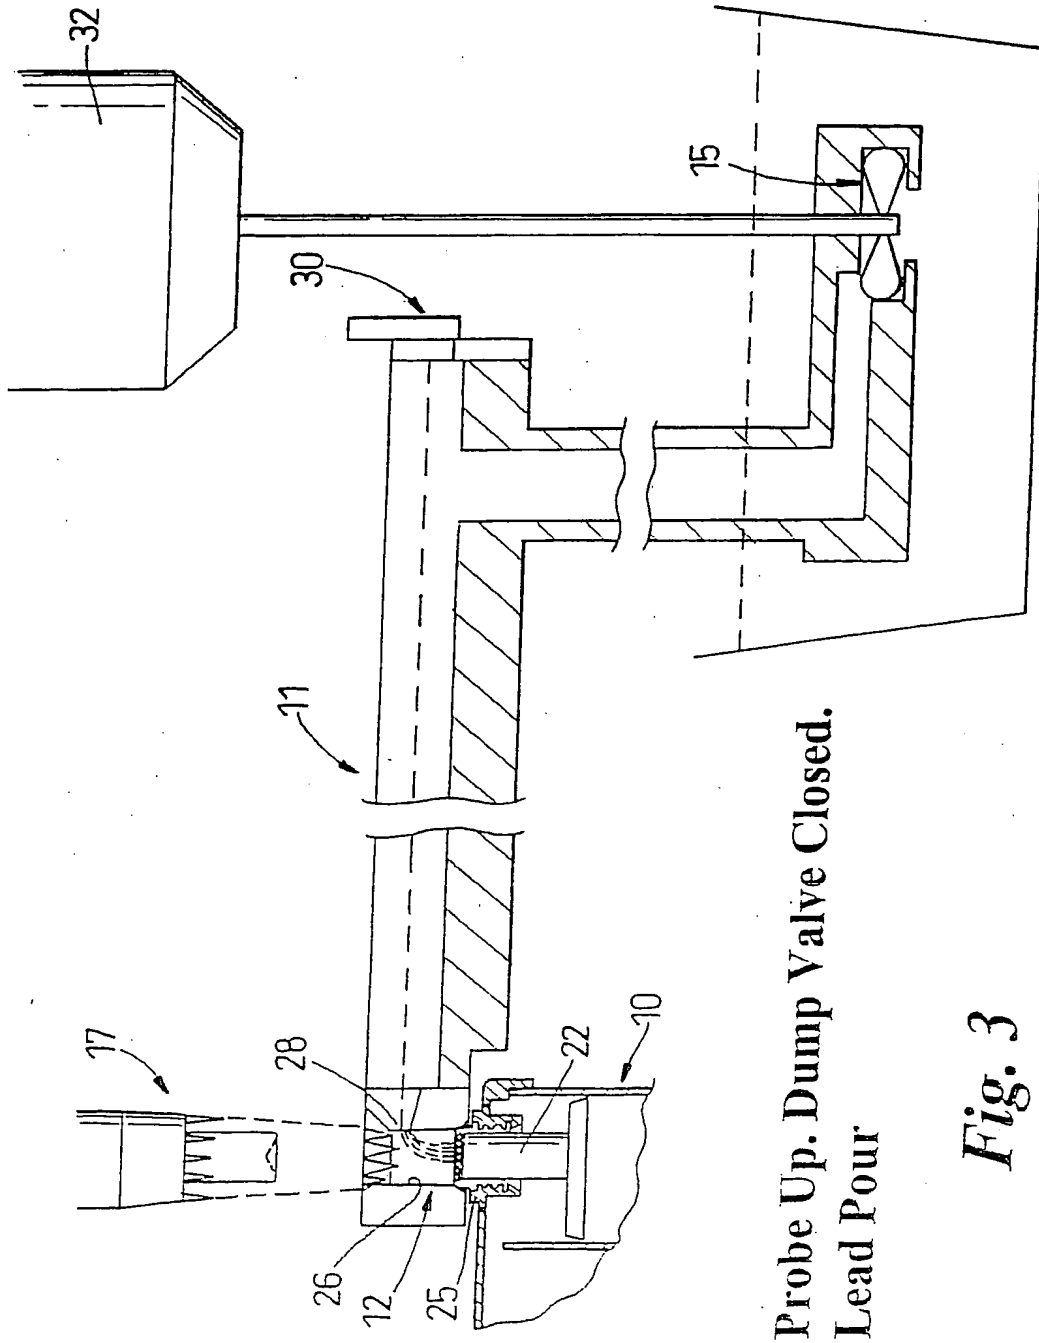


4/5

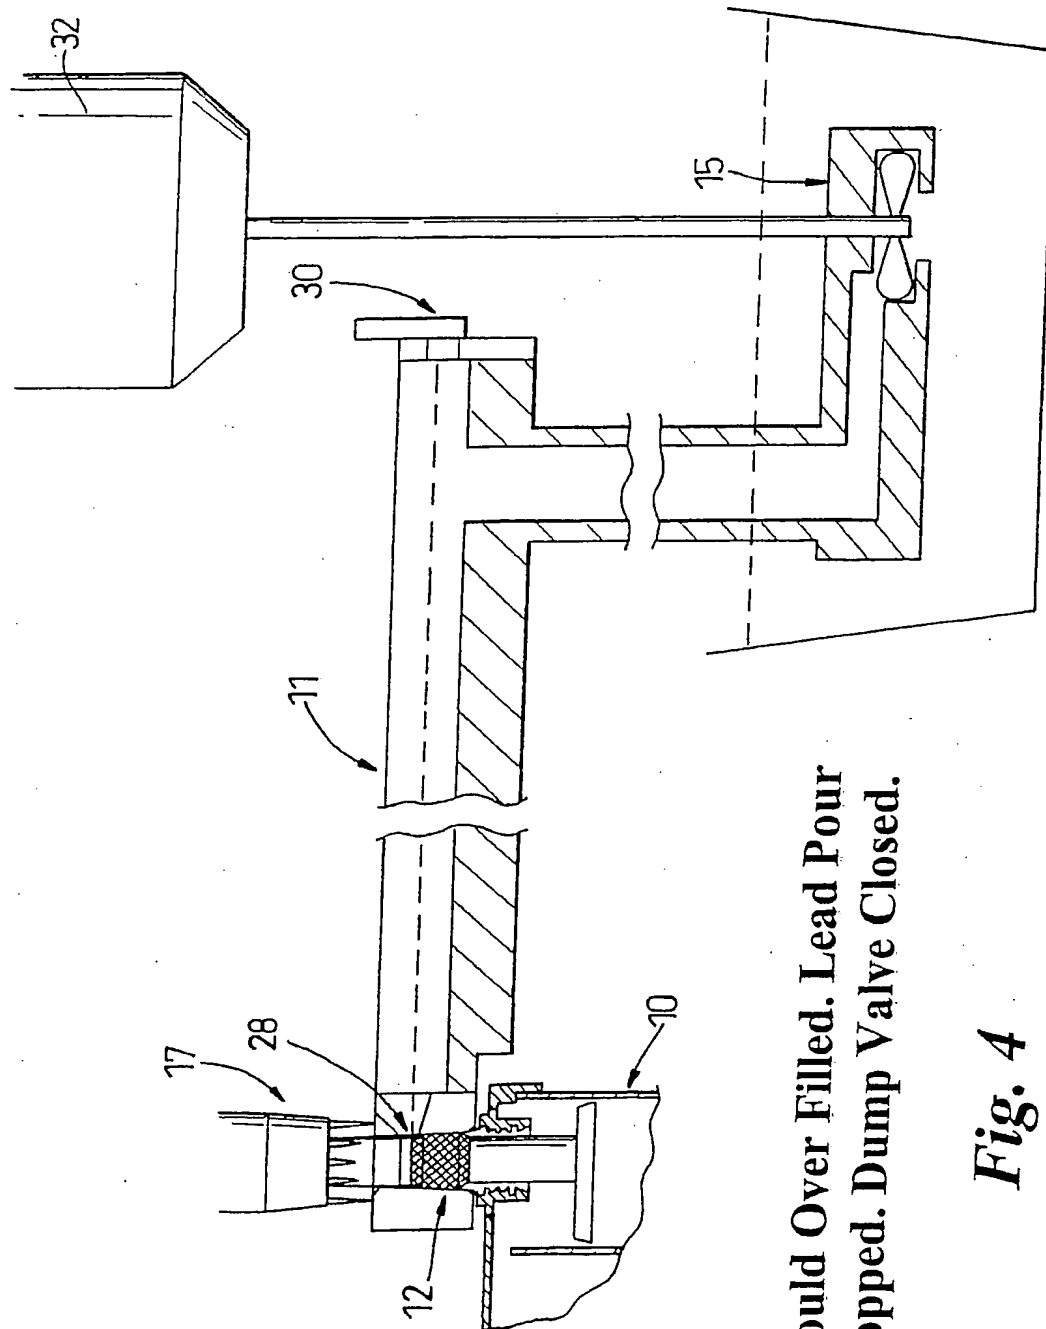

Mould Over Filled. Lead Pour
Stopped. Dump Valve Closed.

Fig. 4

5/5

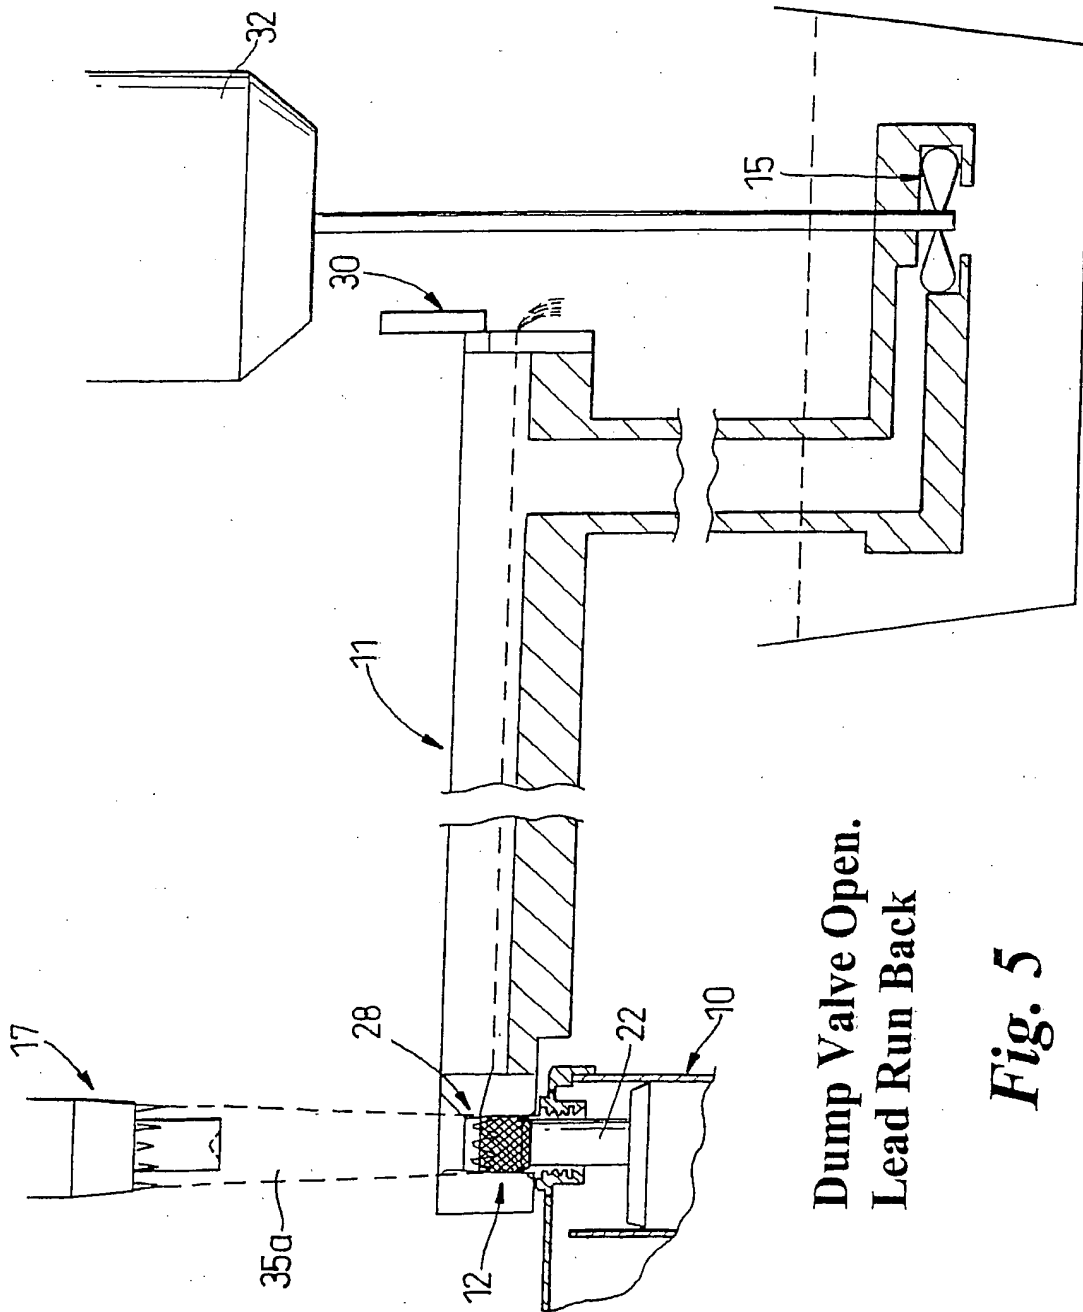

Dump Valve Open.
 Lead Run Back

Fig. 5